1850644
King Chancellor Bed


Parts List

A.	Headboard	1 pc
B.	Footboard	1 pc
C.	Bun Feet	2 pcs
D.	Side Rails	2 pcs
E.	Support Slats	4 pcs
F.	Center Support Slat	1 pc
G.	Leg Supports	3 pcs
H.	Allen Head Bolts	4 pcs
I.	Long Phillips Head Screws	20 pcs
J.	Short Phillips Head Screws	2 pcs
K.	Flat Washers	4 pcs
L.	Lock Washers	4 pcs
M.	Allen Head Wrench	1 pc
N.	Phillips Head Screwdriver	1 pc


* Please make sure that you have all the parts indicated above before you begin assembly of this item.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.

1850644
King Chancellor Bed


Hardware Illustrations

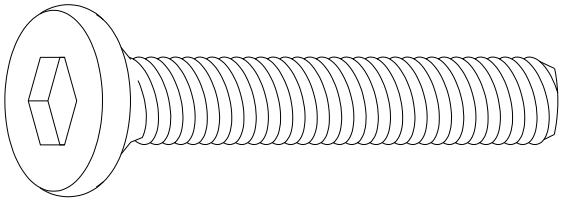


H. Allen Head Bolt




I. Long Phillips Head Screw



J. Short Phillips Head Screw

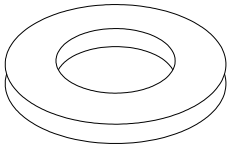

K. Flat Washer

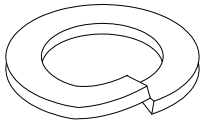

L. Lock Washer

1850644
King Chancellor Bed

Attach Bun Feet & Side Rails

Parts required

A.	Headboard	1 pc	D.	Side Rails	2 pcs
B.	Footboard	1 pc	I.	Long Phillips Head Screws	12 pcs
C.	Bun Feet	2 pcs	N.	Phillips Head Screwdriver	1 pc

1. **Attach Feet (C)** Place the Headboard (A) upside down on a soft surface. Align the exposed threads of the Bun Feet (C) with the pre-threaded holes in the Headboard (A). Tighten by turning in a clockwise directon. Turn the Headboard (A) upright. See Illustration #1.
2. **Attach Side Rails (D)** Insert the exposed hooks at the end of Side Rails (D) into the pre-bored slots of the Headboard (A) and Footboard (B). Press the Side Rails (D) down onto the pins in Headboard (A) and Footboard (B) and ensure that the hooks are all the way down on the pins. Make sure the pre-drilled holes in "L" shaped metal bracket align with the pre-drilled holes in the posts of Headboard (A) and Footboard (B). Secure with Long Phillips Head Screws (I) using Phillips Head Screwdriver (N). See Illustration #1.

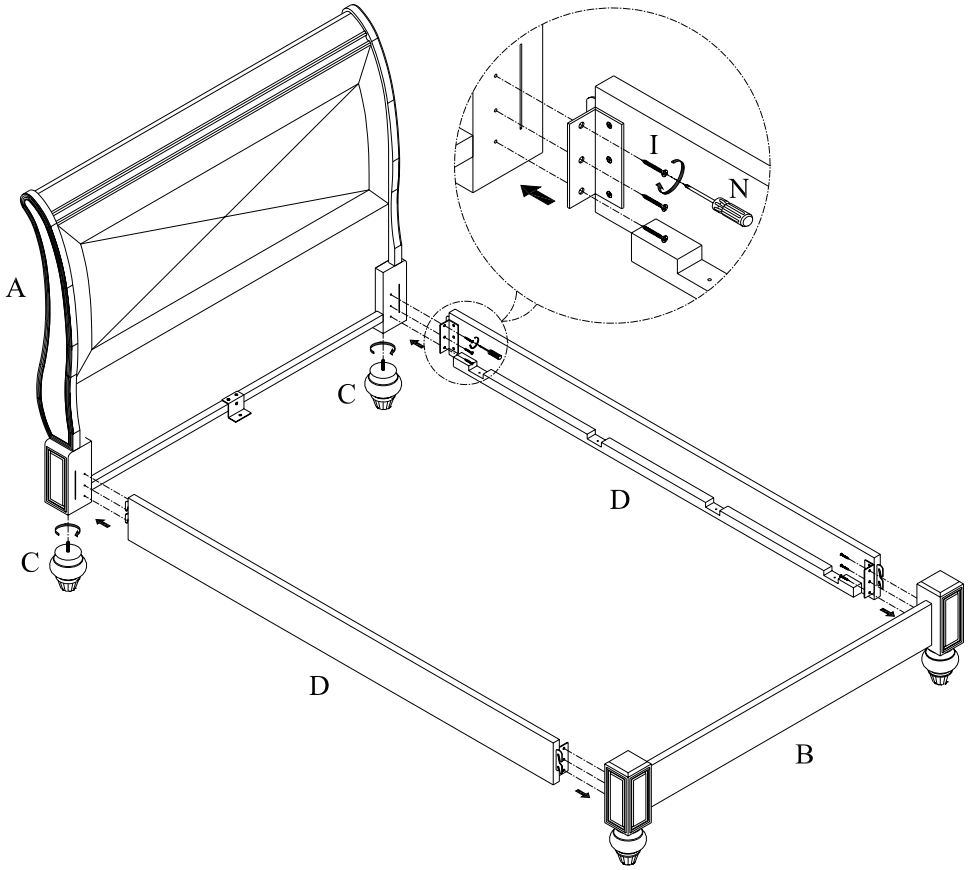


Illustration #1

1850644
King Chancellor Bed

Attach Leg Supports, Center Support Slat& Support Slats

Parts required

A.	Headboard	1 pc	I.	Long Phillips Head Screws	8 pcs
B.	Footboard	1 pc	J.	Short Phillips Head Screws	2 pcs
D.	Side Rails	2 pcs	K.	Flat Washers	4 pcs
E.	Support Slats	4 pcs	L.	Lock Washers	4 pcs
F.	Center Support Slat	1 pc	M.	Allen Head Wrench	1 pc
G.	Leg Supports	3 pcs	N.	Phillips Head Screwdriver	1 pc
H.	Allen Head Bolts	4 pcs			

3. **Attach Leg Supports (G)** Align the exposed threads of the Leg Supports (G) with the pre-threaded holes in the Center Support Slat (F). Make sure the Leg Supports (G) are attached to the correct side of the Center Support Slat (F). Refer to the label on the Center Support Slat (F). Secure in place by turning in a clockwise direction. See Illustration #2.
4. **Attach Center Support Slat (F)** Align the pre-drilled holes in either end of the Center Support Slat (F) with the pre-drilled holes in the "Z" shaped metal brackets on the Headboard (A) and Footboard (B). Make sure the ends of the Center Support Slat (F) face the correct direction. Refer to the label on the Center Support Slat (F). Secure with Short Phillips Head Screws (J) using the Phillips Head Screwdriver (N). Align the pre-drilled holes in the Support Slats (E) with the pre-threaded holes in the Center Support Slat (F). Secure with Allen Head Bolts (H), Lock Washers (L) and Flat Washers (K) using Allen Head Wrench (M). See Illustration #2.
5. **Attach Support Slats (E)** Align the pre-drilled holes at the ends of the Support Slats (E) with the pre-drilled holes in the cleats of the Side Rails (D). Secure with Long Phillips Head Screws (I) using Phillips Head Screwdriver (N). See Illustration #2.

1850644
King Chancellor Bed

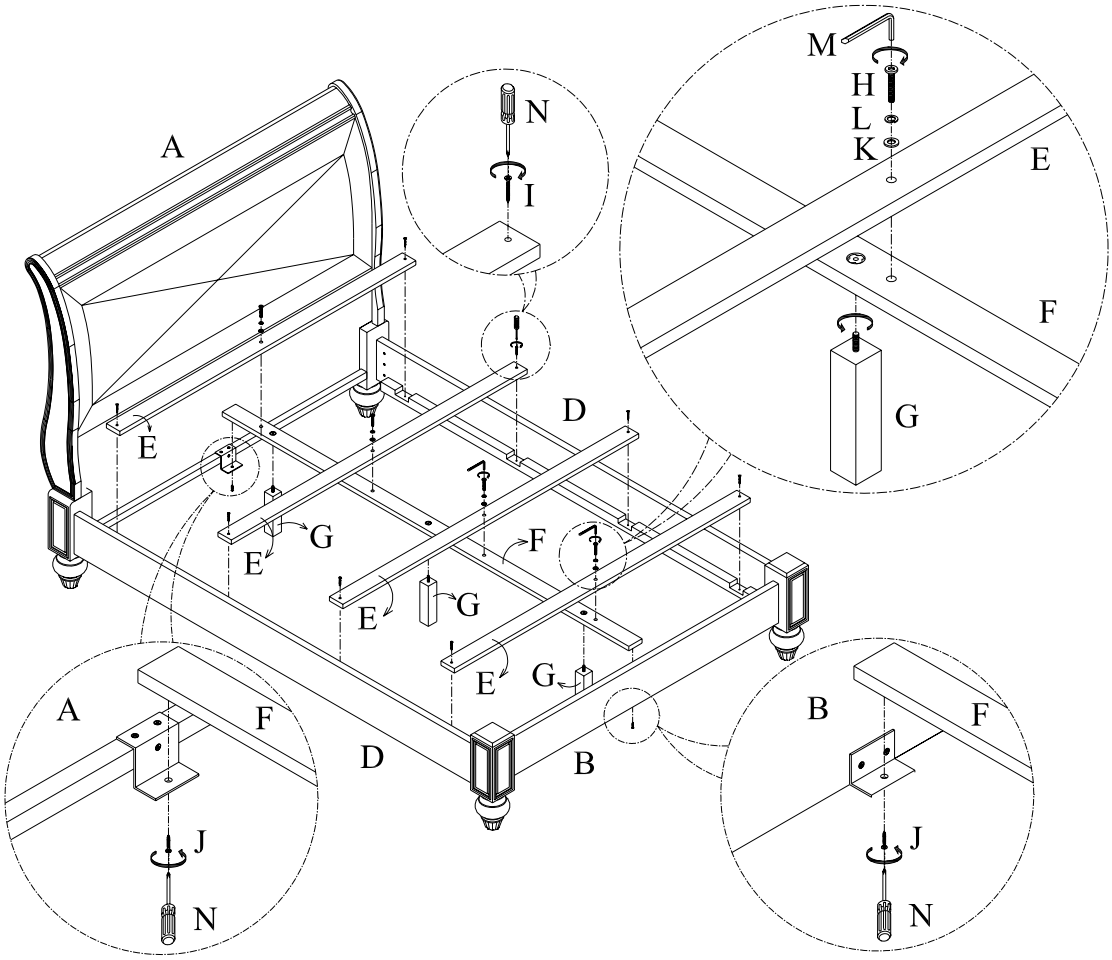


Illustration #2